


MOUNTING PROCEDURE

KIT WINDSHIELD
TRIUMPH SPEED TRIPLE '11 - '13
TRIUMPH STREET TRIPLE R '11 - '13

TS9300-11WWW.BARRACUDAMOTO.COM**KIT**

- X1. SPECIFIC BRACKET
- X1. WINDSHIELD/SCREEN
- X1. THICKNESS 19 MM
- X1. THICKNESS 16 MM
- X2. SCREW 8X50
- X4. SCREW 5X12
- X4. TEFLON WASHER
- X8. RUBBER WASHER
- X4. SPECIAL BUSH
- X4. ADHESIVE SPONGE

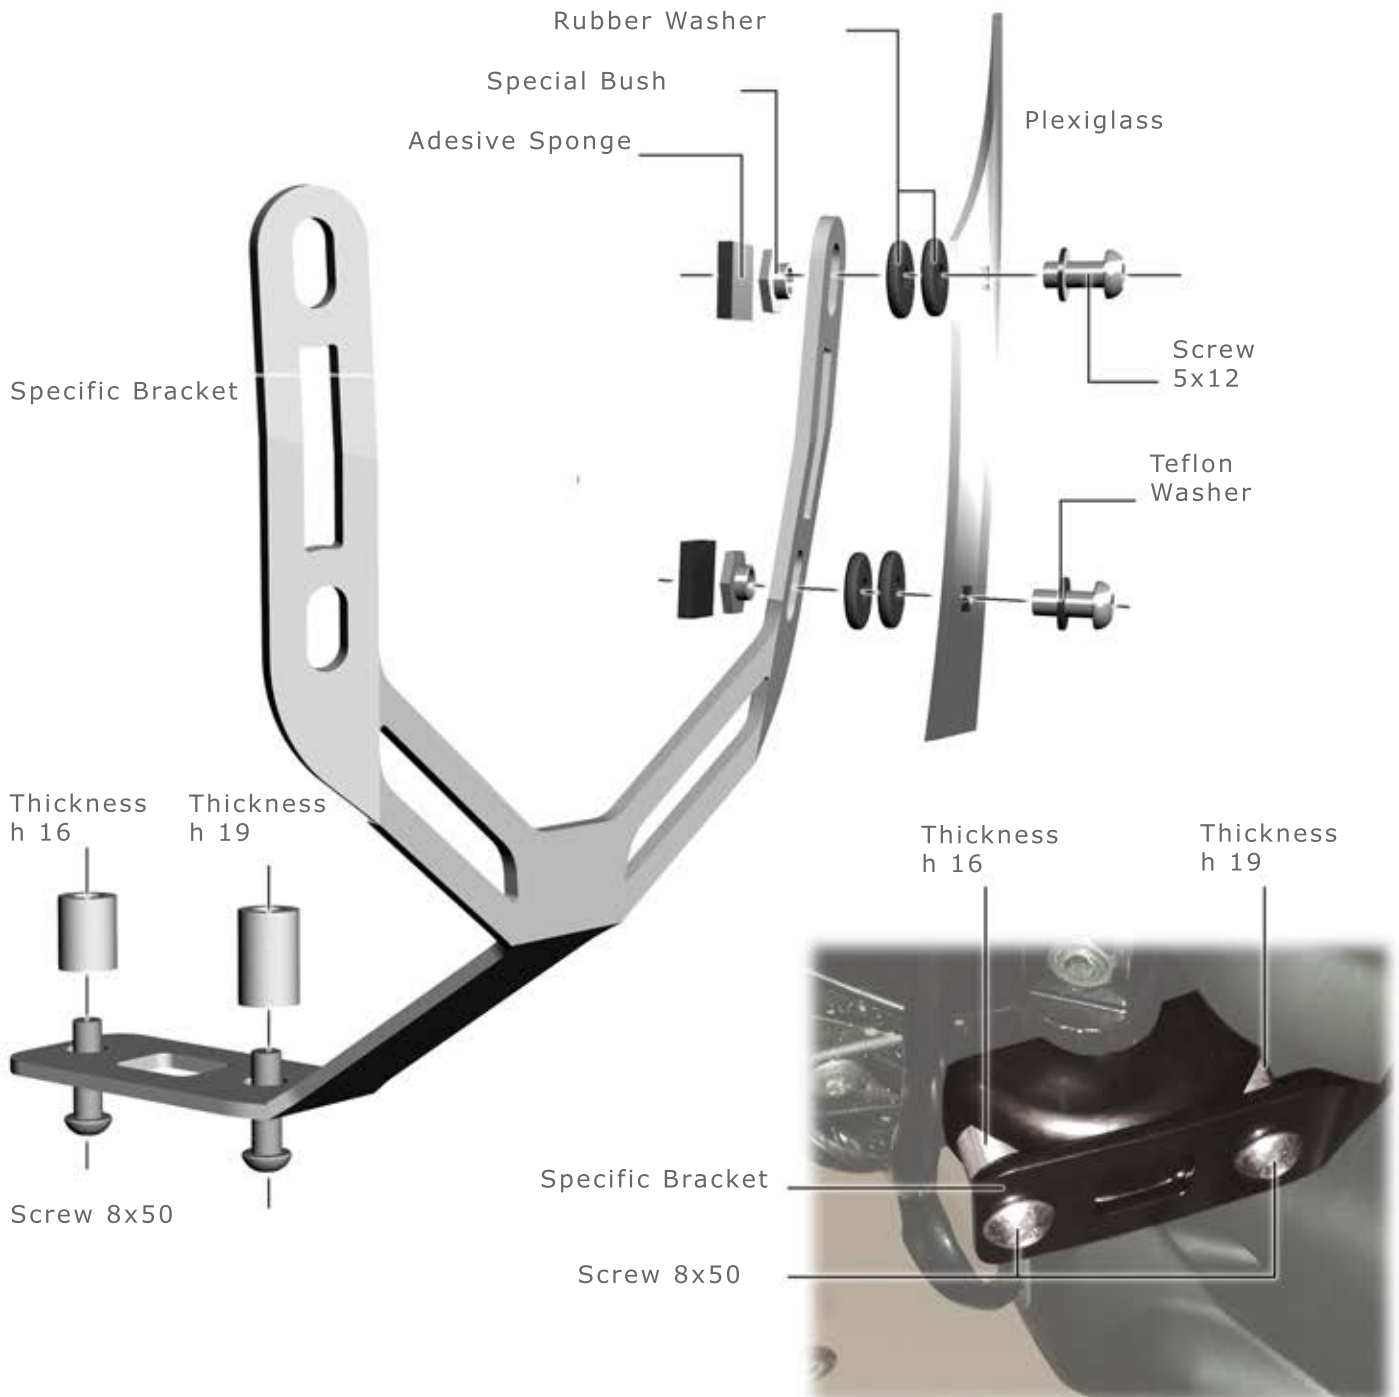

PUT AND MOUNT THE WINDSHIELD/SCREEN ON THE SPECIFIC BRACKET LIKE SHOWN IN THE PICTURE. REMOVE THE ORIGINAL BRACKET THAT SUPPORT THE DOUBLE LIGHT. POSITION BARRACUDA SPECIFIC BRACKET ON THE WINDSHIELD/SCREEN MOUNTED BEFORE, PASSING THAT BETWEEN THE TWO LIGHTS AND PUT IT UNDER THE ORIGINAL BRACKET ATTACK (SEE THE PICTURE). USE THE SPECIFIC THICKNESS AND THE 8X50 SCREWS INCLUDED IN THE KIT (SEE THE PICTURE).
 NOTE: LOCK ALL ONLY AFTER YOU MOUNT THE WINDSHIELD/SCREEN AND HAVE FIND THE RIGHT POSITION OF IT