

MOUNTING PROCEDURE


KIT SAVE CARTER YAMAHA FZ6/FZ6-S2

YF6101

WWW.BARRACUDAMOTO.COM

KIT

- X2. PVC HEAD
- X2. SAVE CARTER BASE
- X1. SPACER 40 MM
- X1. SPACER 29 MM
- X1. BOLT 10X100
- X1. BOLT 10X90

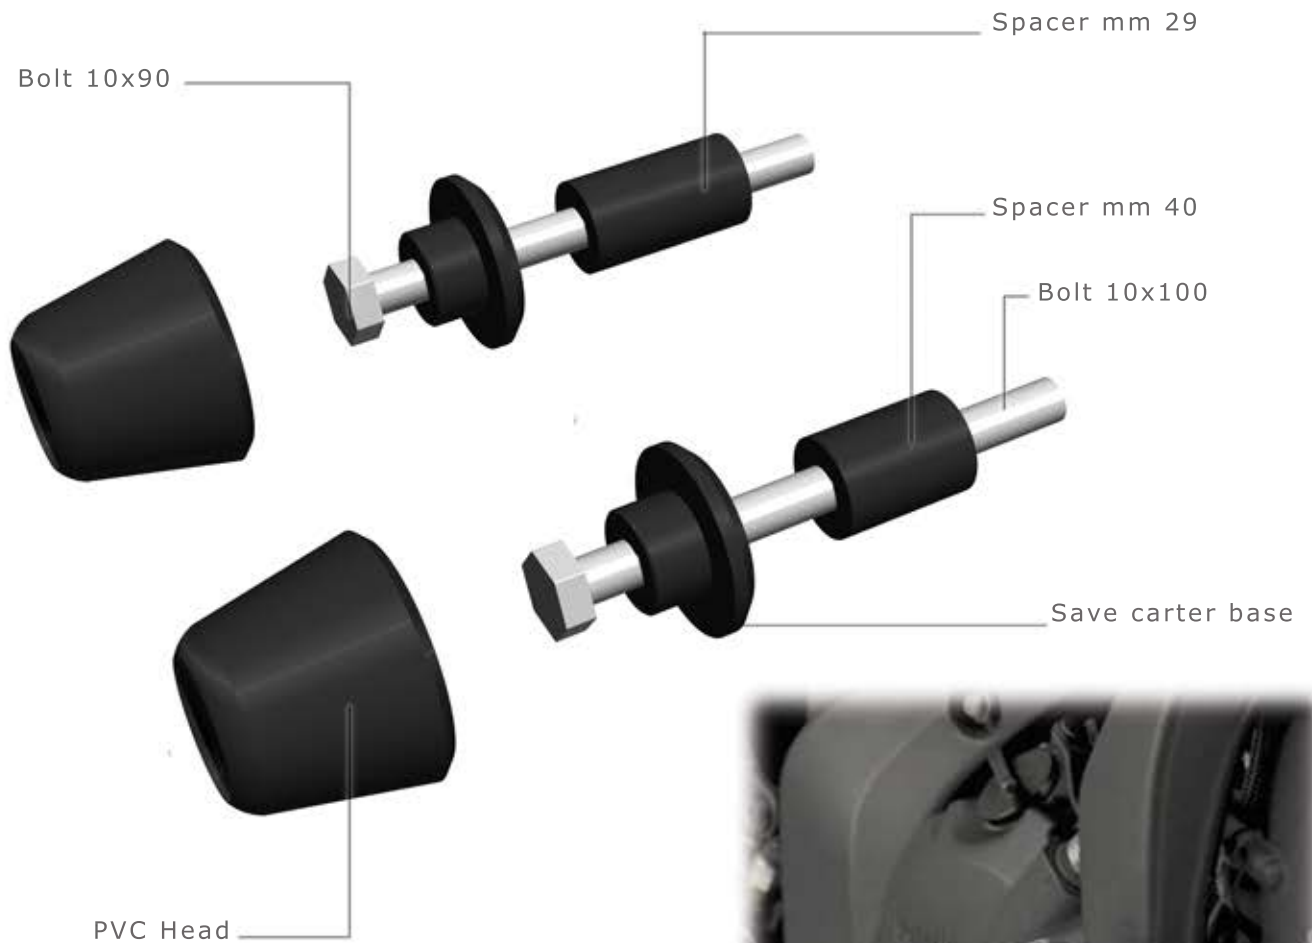

ATTACK POINT TO THE CAHSSIS



SEARCH AND FIND THE FIXING POINT ON THE MOTORBIKE BEFORE START TO MOUNTAIN, USE THE SPECIFIC THICKNESS AND BOLTS LIKE DESCRIBED IN THE PICTURE (SO YOU CAN GET THE RIGHT PROMINENCE FROM THE MOTORBIKE).
FIX THE PVC HEAD AFTER FIXED AND TIGHTEN ALL THE KIT ONLY.