


MOUNTING PROCEDURE**KIT WINDSHIELD
YAMAHA FZ6-S2****YF6300-S2**WWW.BARRACUDAMOTO.COM**KIT**

- X2. BRACKET
- X2. THICKNESS Ø 13
- X2. "ROUND HEAD" SCREW 8X45
- X2. WASHER Ø 8
- X4. "ROUND HEAD" SCREW 5X16
- X4. TEFLON WASHER Ø 5
- X4. RUBBER WASHER
- X4. WASHER Ø 5
- X4. AUTOLOCK NUT Ø 5
- X1. BARRACUDA WINDSHIELD/SCREEN

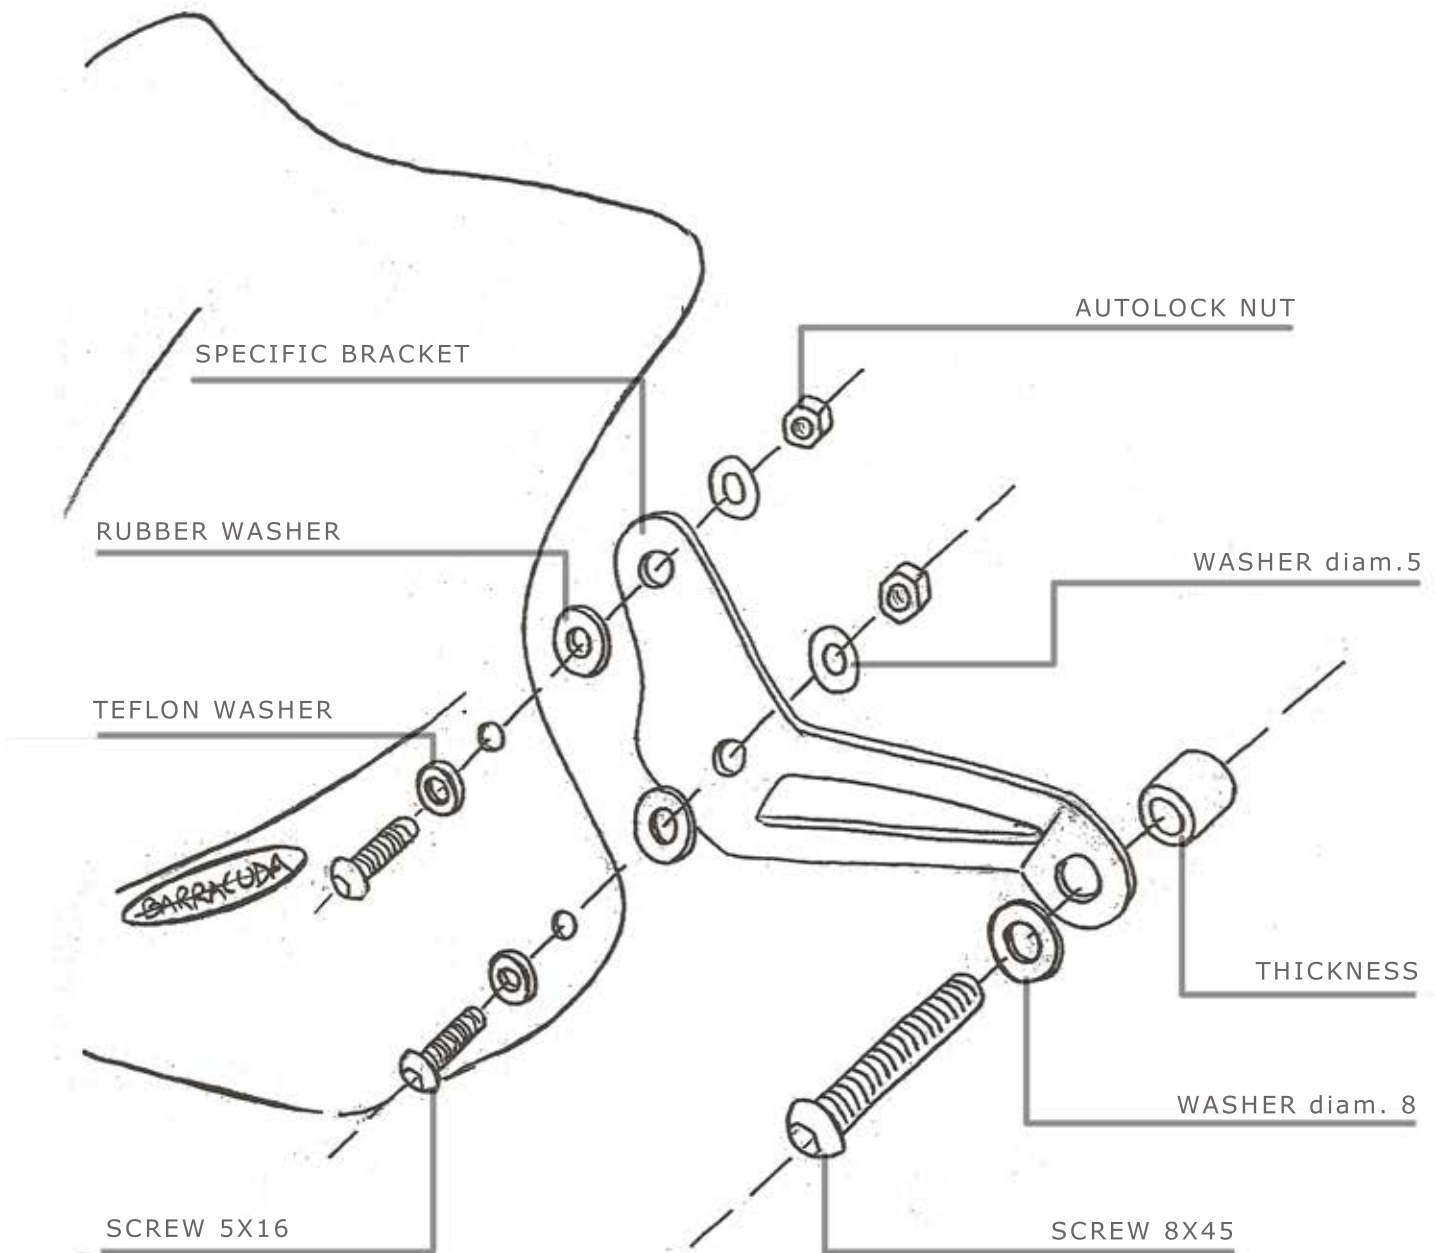

INSTALL THE WINDSHIELD/SCREEN LIKE DESCRIBED IN THE PICTURE.
PUT THE TEFLON WASHERS BETWEEN THE HEAD OF SCREW AND THE WINDSHIELD.
DON'T LOCK TOO MUCH THE AUTOLOCK NUTS DIAMETER 5 TO AVOID DAMAGES