


**MOUNTING PROCEDURE****KIT WINDSHIELD  
YAMAHA XJ6 '09****YJ6300**[WWW.BARRACUDAMOTO.COM](http://WWW.BARRACUDAMOTO.COM)**KIT**

- X2. BRACKET
- X2. "ROUND HEAD" SCREW 8X45
- X2. THICKNESS H 10 MM
- X2. WASHER DIAMETER 8
- X4. "ROUND HEAD" SCREW 5X16
- X4. WASHER DIAMETER 5
- X4. TEFLON WASHER DIAMETER 5
- X4. RUBBER WASHER
- X4. AUTOLOCK NUT DIAMETER 5
- X1. BARRACUDA WINDSHIELD/SCREEN

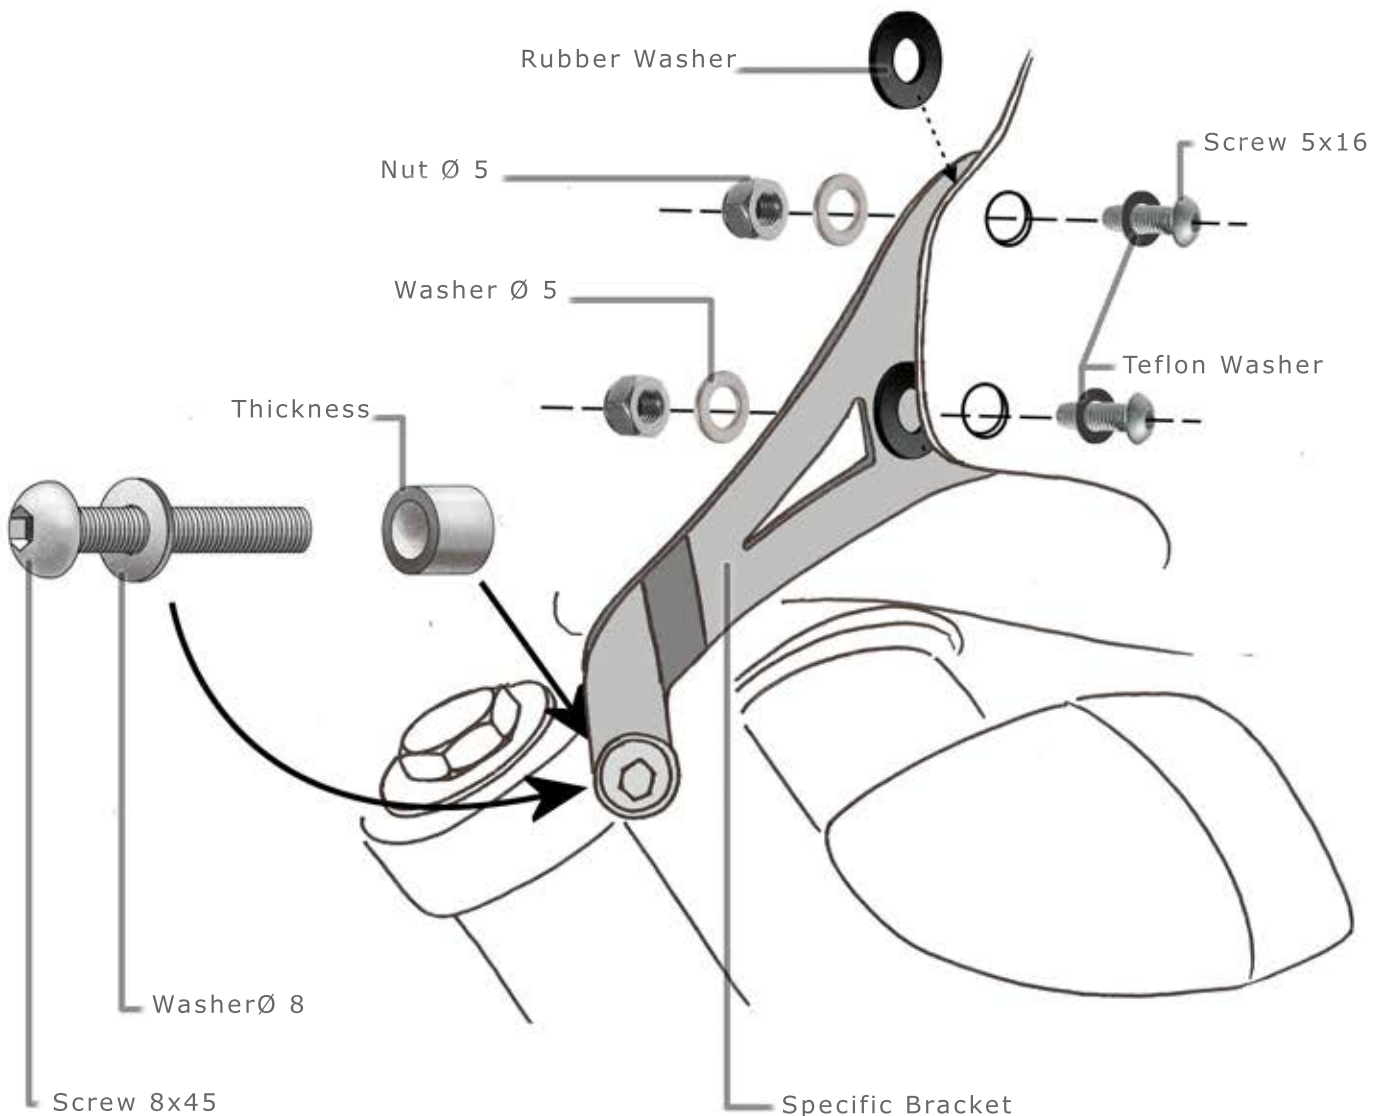

PUT THE TWO BRACKET ON THE STEERING PLATE, LIKE DESCRIBED IN THE PICTURE. ONCE YOU MOUNTED THE BRACKET, WITHOUT LOCK, MOUNT THE PLEXIGLASS ON IT, PUTTING THE SCEWS AND THE WASHERS FOLLOWING THE PROCEDURE DESCRIBED IN THE PICTURE.FIND THE IDEAL POSITION OF WINDSHIELD/SCREEN AND THAN LOCK ALL. DON'T LOCK TOO MUCH THE SCREW 5X16 ON THE PLEXI-GLASS TO AVOID DAMAGES.

NOTE: THE PICTURE REPRESENT THE MOUNTING LEFT SIDE.