

MOUNTING PROCEDURE**KIT WINDSHIELD
YAMAHA MT07****YMT7300**WWW.BARRACUDAMOTO.COM**MOUNTING PROCEDURE:**


REMOUVE THE ORIGINAL SCREWS AND FIX THE SPECIFIC BRACKET WITH THE SCREW 6X30

POSITION ALL LIKE SHOWN IN THE PICTURE.

FIND THE RIGHT POSITION OF WINDSHIELD ON THE BRACKET ALREADY FIXED AND LOCK ALL THE SCREWS.

KIT

- X1. PLEXIGLASS
- X2. SPECIFIC BRACKET
- X4. SPECIAL WASHER
- X4. ROUND HEAD SCREW 5X12
- X4. ROUND HEAD SCREW 6X30
- X4. TEFLON WASHER Ø 5
- X4. RUBBER WASHER

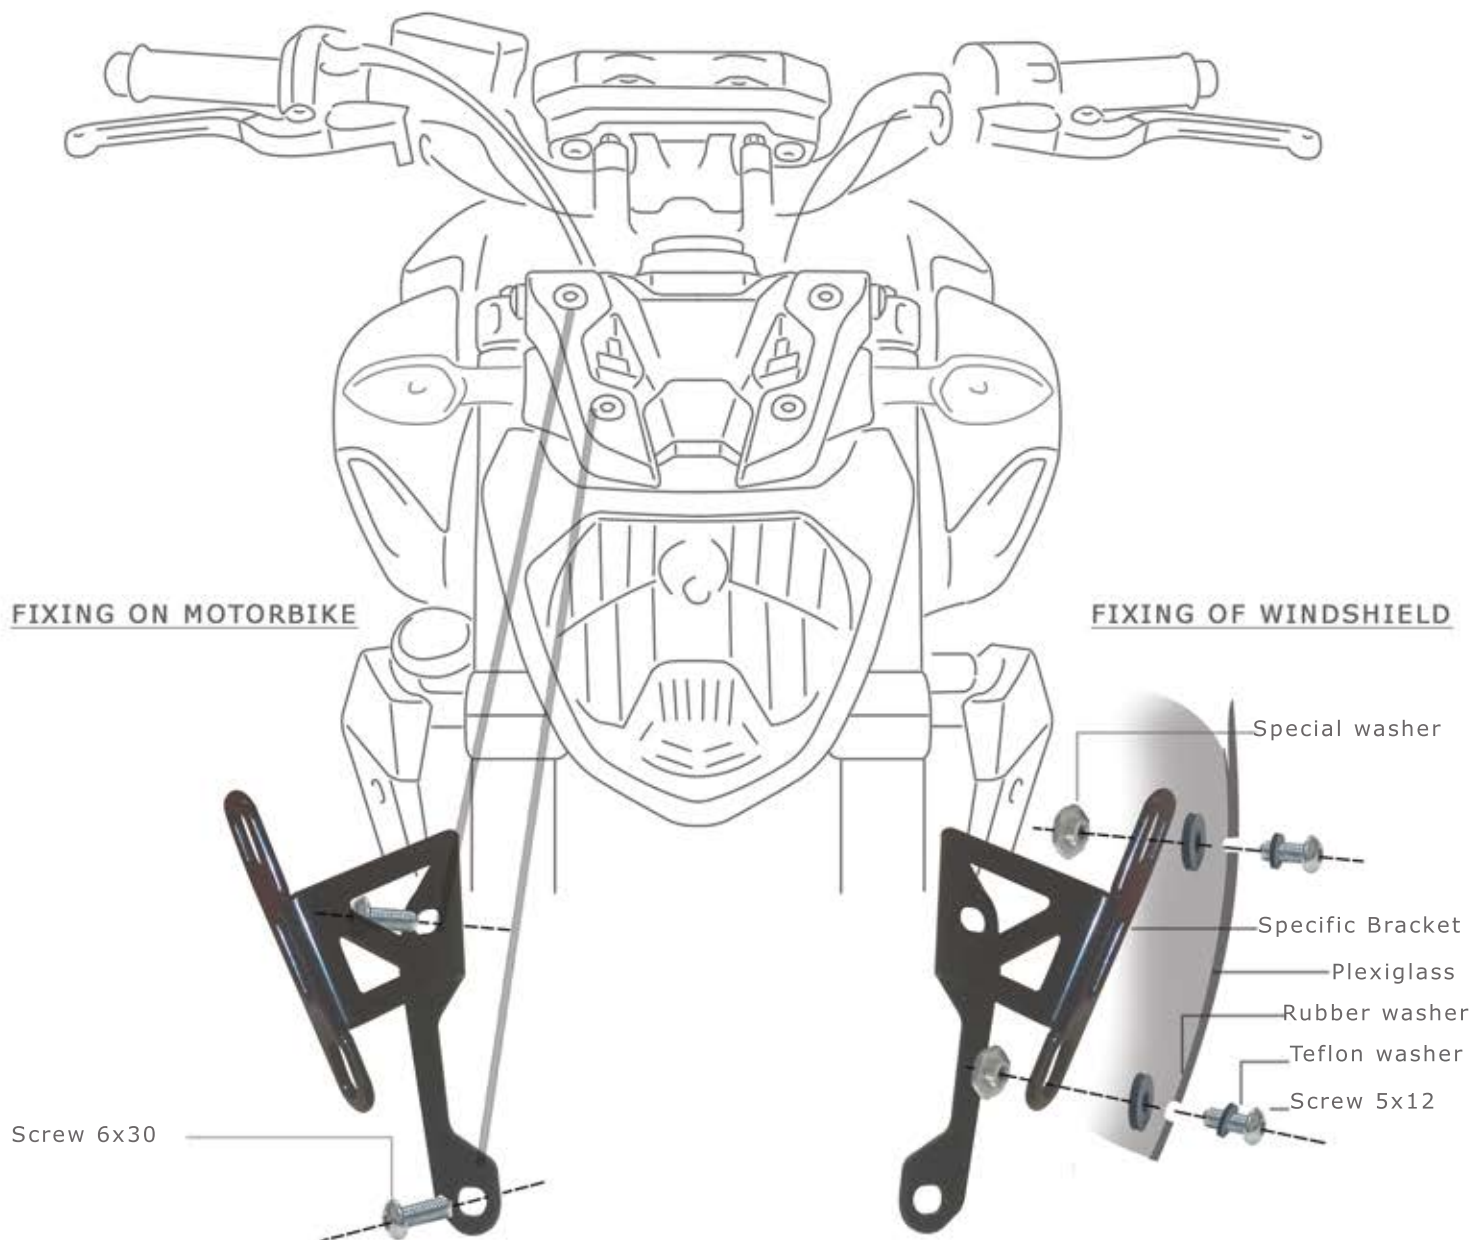

NOTE: NOT LOCK TOO MUCH TO AVOID DAMAGE TO THE PLEXIGLASS